JALECO


(MOVING TYPE)

JAVIAGO RVAVIASY DIG DIJUM THE SUPREME 4WD CHALLENGE


PARTS LIST



10 (35) (13) (21) (12) (33) (5) (14)

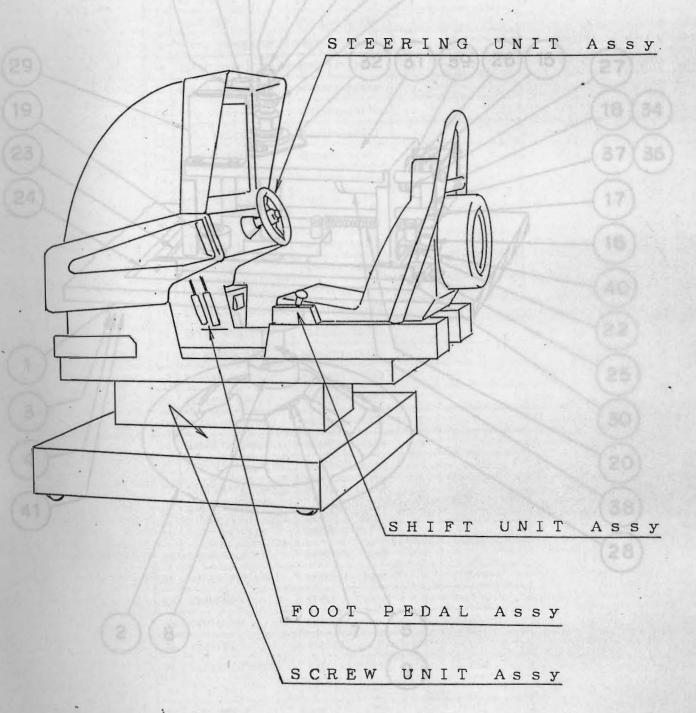


STEERING UNIT Assy

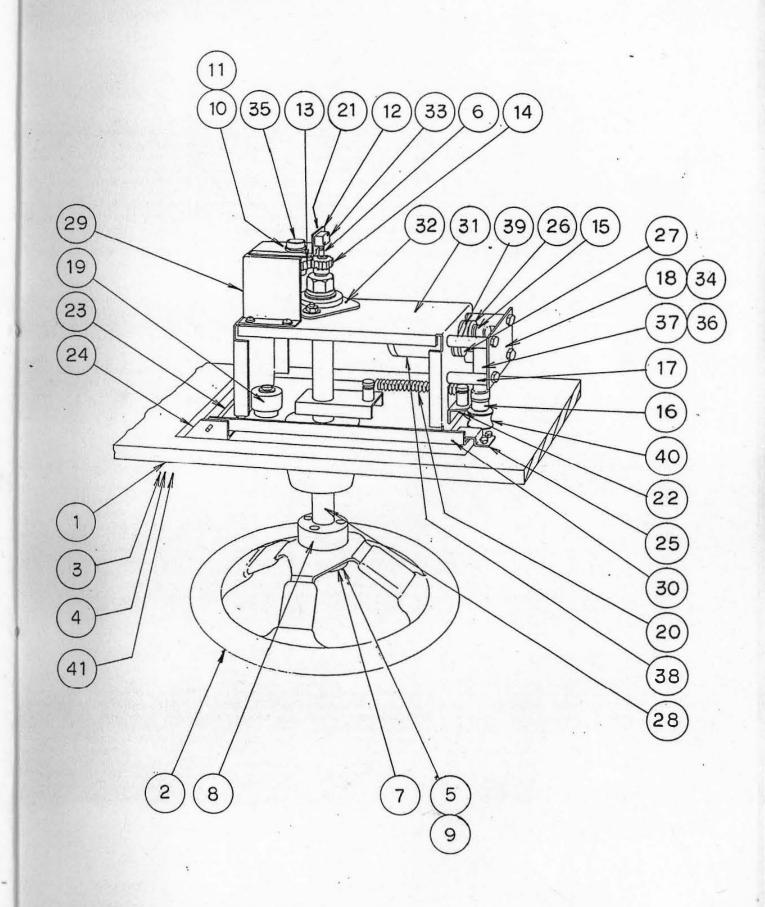


STEERING UNIT Assy


NO	DESCRIPTION	DWG / PART NO.	0/0	REMARKS
1	DASH BOARD	MB88004-10009	1	
2	STEERING WHEEL	MB88004-20013	1	
3	DASH BOARD PANEL	NB88004-30012	1	
4	PLAY INST. PLATE	MB88004-40016	1	
5	SW SPRING	NB88004-40067	1	
6	HORN BAR	NB88004~40068	1	
7	WHEEL HOLDER(A)	N888004-40069	1	
8	WHEEL HOLDER (B)	NB88004-40070	1	
9	STEERING KEY	NB88004-40071	1	
10	POT. PLATE H	MB88004-40072	1	
11	PDT. GUIDE	MB88004-40073	1	
12	SW BRACKET	NB88004-40074	1	
13	SPUR GEAR HV	XBB8004-40075	1	
14	SPUR GEAR H	NB88004-40076	1	
15	SHOCK SHAFT	KB88004-40077	1	
16	CRANK ARN	MB88004-40078	1	
17	SHOCK POST	MB88004-40079	4	
18	BEARING BRACKET	MB88004-40080	1	
19	STEERING STOPPER	NB88004~40081	1	
20	WHEEL SPRING(A)	MB88004-40082	1	
21	SW PLATE (A)	MB88004-40083	1	
22	SPRING BRACKET	NB88004-40084	1	THE STA
23	BRACKET SHAFT	KB88004-40085	1	
24	WHEEL BRT (A)	M888004-40086	1	
25	SHOCK STOPPER	MB88004-400B7	1	
26	TIMING PULLEY(A)	NB88004-40089	1	
27	TINING PULLEY(B)	NB88004-40090	1	
28	WHEEL SHAFT	NB88004-30067	1	
29	POT. BRACKET	KB88004-30068	1	
30	WHEEL BKT (B)	NB88004-30069	1	
31	WHEEL BKT (C)	MB88004-20030	1	
32	BEARING	BPFL4	2	
33	NICRO SW	AH7152361	1	50 GR
34	BEARING	F688ZZ	2	
35	POTENTIO NETER	EWS-u0AS15E53	1	5K OHK
36	BEARING	80B-101540073	1	
37	ROD END	JAF12	1	
38	DC MOTOR	DNE44B9	1	
39	TIMING BELT	80 X L O 3 1	1	
40	DAMPER	KA-25	1	
41	PUSH SW (12V)	0 BSA-30	2	LANP: HR-161
42	HORN BUTTON	0BSA-45	1	WITH SPRING


SHIFT UNIT ASSY

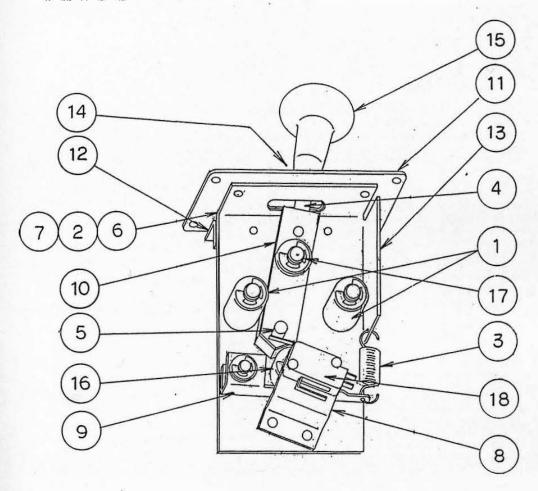

NO	DESCRIPTION	DWG / PART NO.	Q/U	REMARKS
1	SHIFT RUBBER	NB88004-40055	2	11 27 Aug 1
2	SHIFT COVER	KB88004-40056	1	
3	SHIFT SPRING	KB88004-40057	1	
4	SHIFT SHAFT	XB88004-40058	1.	
5	SW POST SH.	MB88004-40059	- 1	
6	COVER GUIDE(A)	KB88004-40060	1	
7	COVER GUIDE(B)	MB88004-40061	1	
8	SW BRACKET	MB88004-40062	1	
9	SHIFT ARK	MB88004-40063	1	
10	SHIFT LEVER	₩B88004-40064	1	
11	SHIFT PANEL	MB88004-30066	1	
12	SHIFT BRACKET (A)	MB88004-40065	1	
13	SHIFT BRACKET(B)	MB88004-20029	1	
14	SHAFT COVER	KB88004-40066	1	
15	SHIFT KNOB NO.4		1	
16	BEARING	KR636ZZ	1	1
17	BEARING	80F-1008	2	
18	MICRO SW	AH7158261 25g	1	



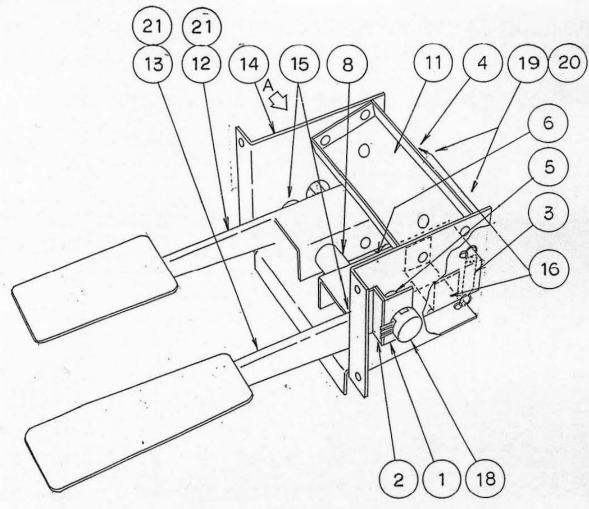


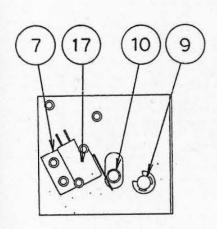

SEE A

NO	DESCRIPTION	DWG / PART NO.	9/1	REMARKS
1	AV BRACKET (B)	MB88004-40118	. 1	*
2	AV BRACKET (A)	MB88004-40119	1	
3	ACCEL SPRING	MB88004-40120	1	
4	BRAKE SPRING	MB88004-40121	1	
5	SPUR GEAR (ACA)	MB88004-40122	1.	
6	SPUR GEAR (ACB)	MB88004-40123	1	1000
7	BS BRACKET	MB88004-40124	1	
8	SHAFT PIPE (A)	MB88004-40125	1	
9	ACCELE SHAFT	MB88004-40126	1	
10	SW PIPE	MB88004-40128	1	
11	STOPPER BK (A)	MB88004-30084	1	
12	BRAKE PEDAL	MB88004-20041	1	
13	ACCELE PEDAL	MB88004-20042	ı	. 1111
14	ACCELE BRACKET	KB88004-20043	1	
15	SHAFT PIPE (B)	MB88004-40129	2	
16	STOPPER BK (B)	MB88004-40130	2	
17	MICRO SWITCH	AH7158261	1	
18	POTENTIO KETER	EWS-u0 AS 20 E5 3	1	
19	STOPPER	EH100I	2	
20	STOPPER	KI-30	2	
21	BEARING	80F-1410	4	


SCREW UNIT Assy

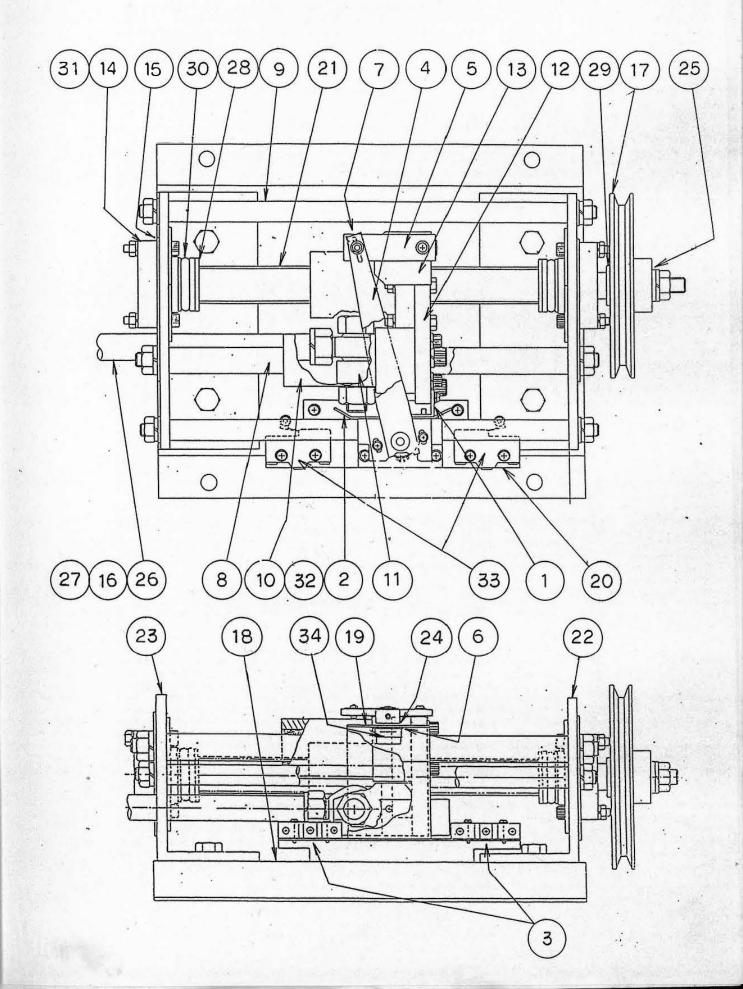


SCREW UNIT ASSY


NO	DESCRIPTION	DWG / PART NO.	Q/U	REMARKS
1 (GUIDE BK	MB88004-40097	1	· ·
2 1	LIKIT GUIDE	MB88004-40098	1	×
3 8	SW PLATE (B)	MB88004-40099	2	
4	VR ARK	MB88004-40100	1	
5	VR ARM (J)	KB88004-40101	1	
6 1	VR PLATE (S)	MB88004-40102	1	
7	ARK POST	KB88004-40103	2	
8	GUIDE ROD	NB88004-40104	1	
9	STAY ROD	MB88004-40105	3	
10	LINER GUIDE	MB88004-40106	1	
11	ROD HOLDER	MB88004-40107	1	
12	NUT BRACKET	MB88004-40108	1	
13	ARM GUIDE	MB88004-40109	1	
14	BEARING CASE	MB88004-40110	2	
15	SCREW GUIDE	MB88004-40111	2	
16	UP SHAFT (A)	MB88004-40114	1	
17	V PULLY	MB88004-30079	1	
18	SCREW BASE	MB88004-30080	1	
19	VR BRACKET (S)	MB88004-30081	1	
20	SW BRACKET (S)	MB88004-30082	1	
21	BALL SCREW	MB88004-20037	1	
22	SCREW HLD W/D(A)	MB88004-20038	1	
23	SCREW HLD W/D(B)	MB88004-20039	1	
24	VR GUIDE	MB88004-40073	1	
25	PULLLY KEY	KB88004-40116	1	
2.6	ROD END	JAN16	1	
27	ROD END	JAF16	1	
28	FLAT RING	FTRE-2035	2	
29	FLAT RING	FTRE-1730	1	Carrie Ville
30	BEARING	53204u	2	
31	BEARING	600422	2	MEDD I
32	BEARING	1. B B S2 0	2	
33	LINIT SWITCH	Z-15GW22-B	2	
34	POTENTIO METER	EWS-u0AS25E53	1	

MOTOR UNIT Assy

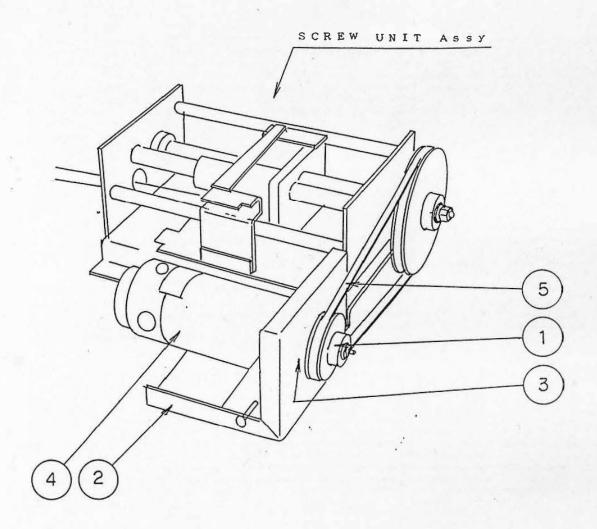


ИО	DESCRIPTION	DWG / PART NO.	Q/U	REMARKS
1	MOTOR PULLY	MB88004-40113	1	
2	KOTOR BK	MB88004-20040	1	
3	STOPPER RING	XB88004-40117	1	
4	DC KOTOR	DANWISOBB	1	350W
5	V-BELT	3V-335	1	

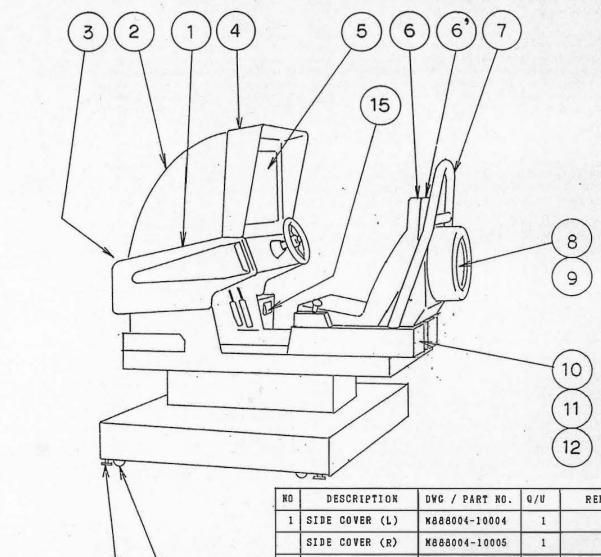

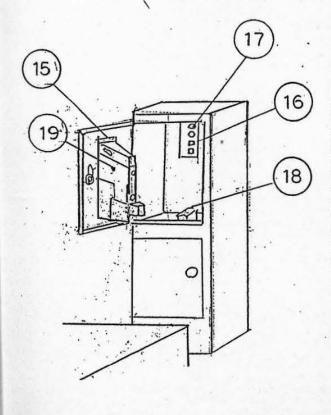

HO	DESCRIPTION	DWG / PART NO.	Q/U	REMARKS
1	SIDE COVER (L)	W888004-10004	1	- 1
	SIDE COVER (R)	M888004-10005	1	
2	TOP COVER	KB88004-10006	1	
3	REAR COVER	MB88004-20011	1	
4	VISOR	MB88004-20012	1	
5	MASKING PANEL	M888004-40020	1	
6	SEAT (A)	KB88004-10007	1	
61	SEAT (B)	M888004-10008	1	
7	ROLL BAR	MB88004-20028	1	
8	FOIL LANP COVER	KB88004-30026	1	
9	FLUORESCENT UNIT	AC 100V	1SET	
10	BRAKE L COVER(A)	MB88004-30019	1	
	BRAKE L COVER(B)	MB88004-30020	1	
11	BRAKE L PANEL(A)	MB88004-40046	1	
	BRAKE L PANEL(B)	MB88004-20028	1	
	BRAKE L PANEL(C)	M888004-30026	2	
12.	LAKP	B15S#1523	2	12V 10W
13	CASTER	K-100HBG-50	4	
14	REG ADJUSTER	C-280-3	4	
15	SELECTOR BRACKET	ADD-FT	1	W/LAMP & SW
16	PUSH SW	SDP-103A-10	2	
17	AOTORE	RV16YN-11SB-14	2	
18	SNOOT		1	
19	COIN SELECTOR		1	

STICKER & MAT

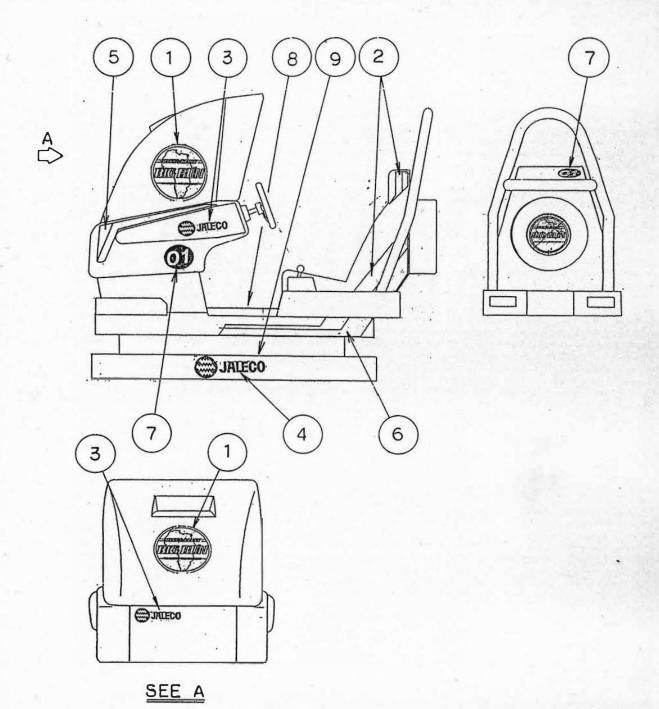

			4	
NO	DESCRIPTION	DWG / PART NO.	0/0	REMARKS
1	BIG RUN MARK ST	MB88004-30070	3	
2	SEAT SIDE ST	MB88004-30071	1SET	
.3	BODY FRT J MARK	NB88004-30072	3	
4	BODY BASE J WARK	MB88004-30073	1SET	
5	BODY UPPER ST	MB88004-30074	1SET	
6	BODY LOWER ST	MB88004-30075	2	
7	CAR NO. ST	MB88004-30076	1SET	
8	VINYL MAT (B)	MB88004-40015	1	FRONT SIDE
	VINYL MAT (A)	KB88004-40014	1	REAR SIDE
9	MAT (L)	MB88004-40142	1	
	MAT (R)	MB88004-40143	1	